

**ARRIVAL**

The normal taxi-route procedure is clockwise taxiing where parallel taxiways are established. Pilots will receive instruction to change frequency between 121.700, 121.925 and 121.975 when crossing the area boundaries of Arlanda Ground. Depending on RWY's in use the areas of responsibility of Arlanda Ground vary. ACFT will receive first GND frequency to contact from TWR.


Freq: 121,700

Freq: 121,925

Freq: 121,975

**LEGEND**

- Asphalt
- Buildings
- Water surface
- TWY bridge
- Communication borders
- Manoeuvring area

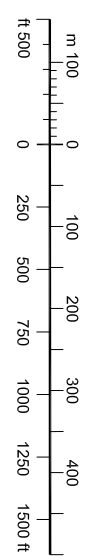

LFLV

CHANGE: New stands apron R and apron S, MAG VAR

AIRAC AMDT 1/2014 06 FEB 2014