


STANDARD ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

TRANSITION
LEVEL : **1**

NIZHNEVARTOVSK, RUSSIA
NIZHNEVARTOVSK
RNAV (GNSS) RWY 03

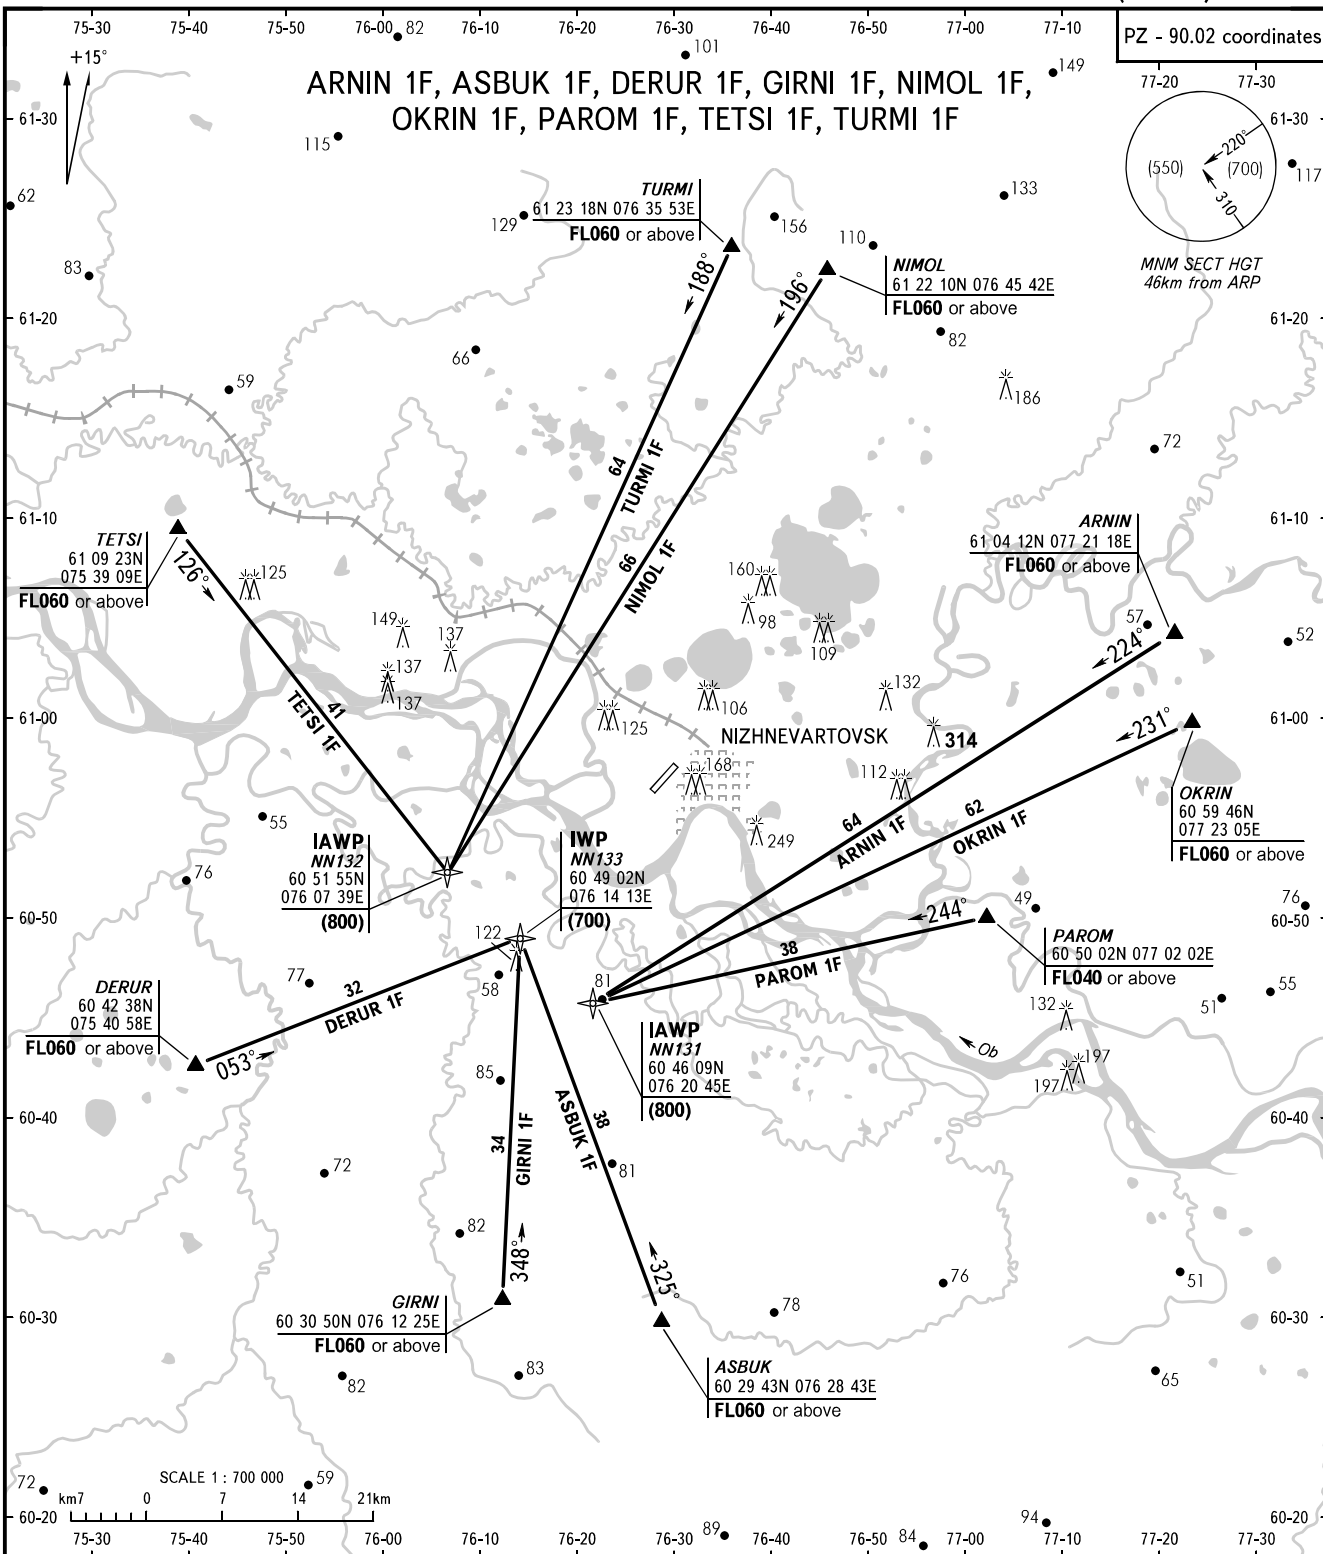

NIZHNEVARTOVSK TOWER **118.100**
RADAR **120.400**

- 1** TRANSITION LEVEL:
- FL040 when atmospheric pressure is 756mm mercury column or above.
 - FL050 when atmospheric pressure is 729mm or above but is less than 756mm.
 - FL060 when atmospheric pressure is less than 729mm.

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES, HEIGHTS AND ELEVATIONS ARE IN METRES
DISTANCES ARE IN KILOMETRES

CHANGE: ELEV. COORD