


STANDARD ARRIVAL CHART  
INSTRUMENT (STAR) - ICAO

TRANSITION  
LEVEL : **1**

NIZHNEVARTOVSK, RUSSIA  
NIZHNEVARTOVSK  
RNAV (GNSS) RWY 21

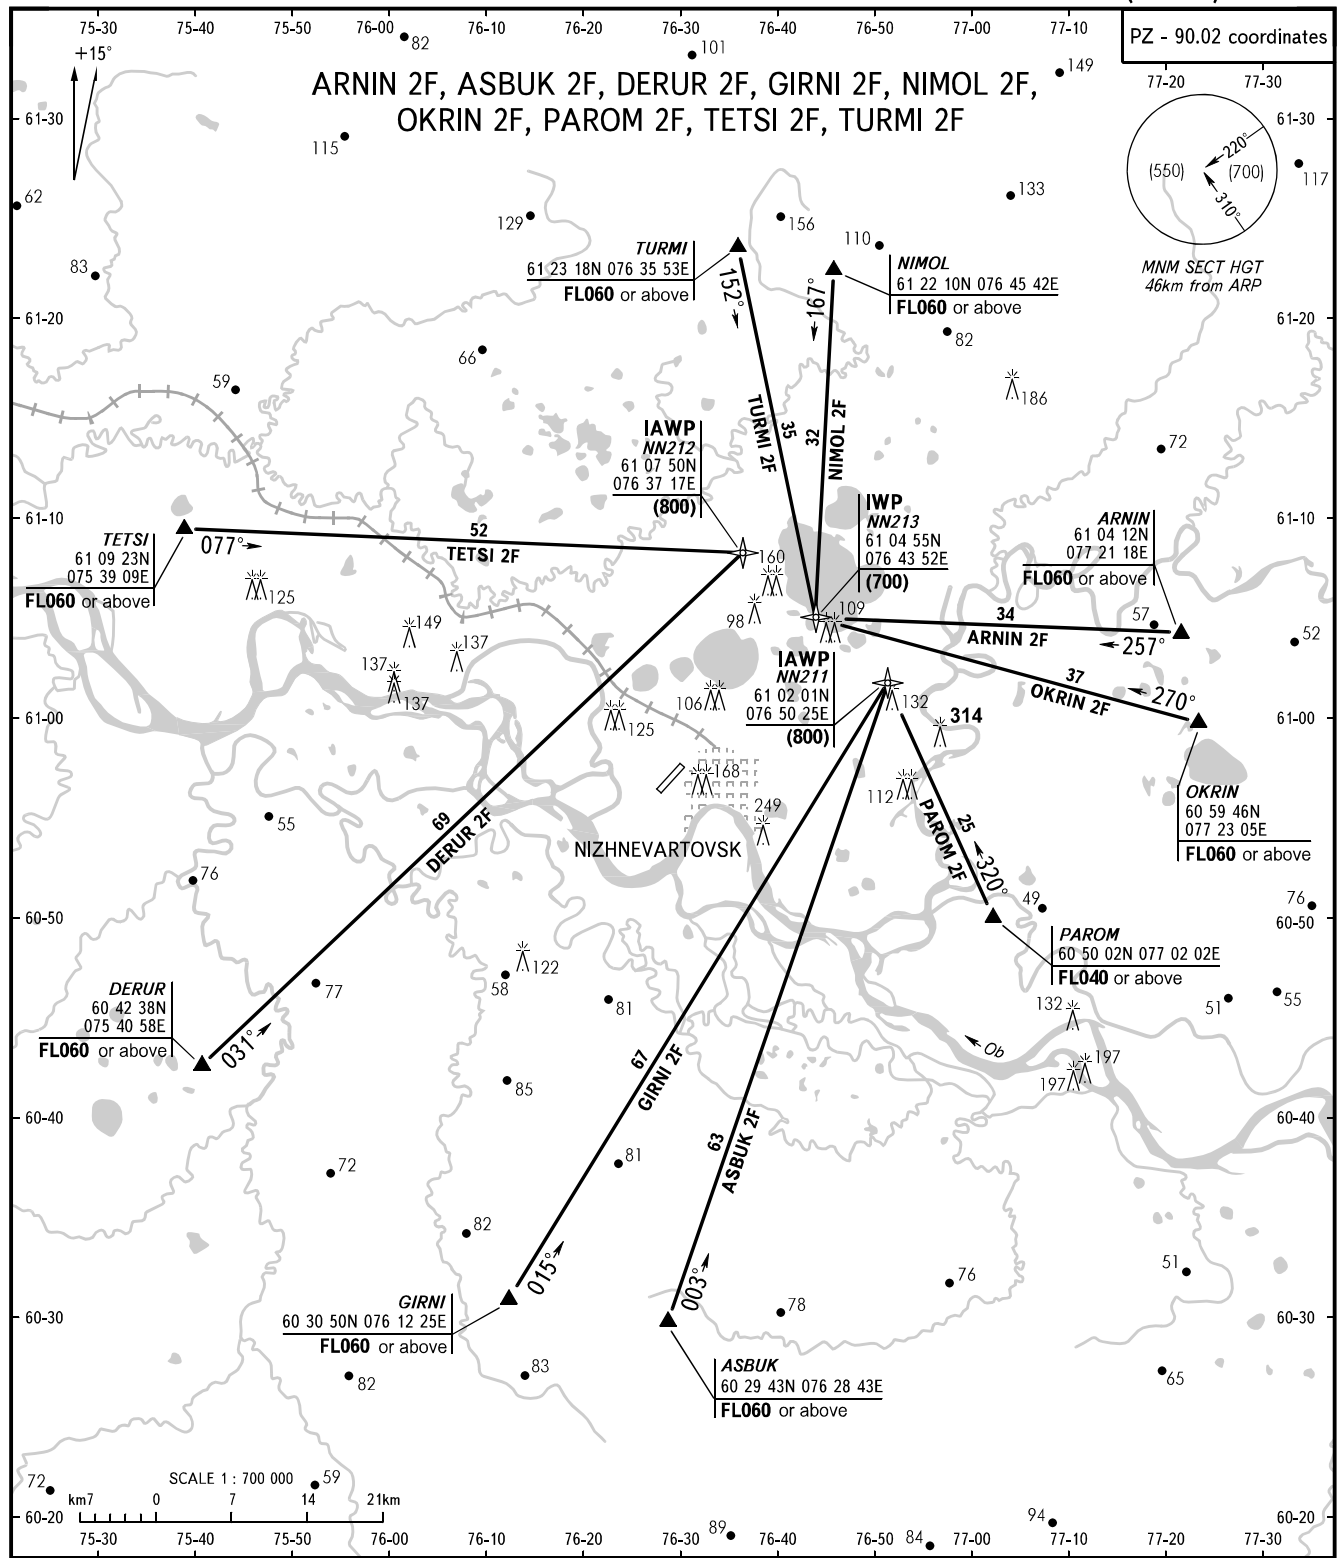

NIZHNEVARTOVSK TOWER **118.100**  
RADAR **120.400**

- 1** TRANSITION LEVEL:
- FL040 when atmospheric pressure is 755mm mercury column or above.
  - FL050 when atmospheric pressure is 728mm or above but is less than 755mm.
  - FL060 when atmospheric pressure is less than 728mm.

BEARINGS AND TRACKS ARE MAGNETIC  
ALTITUDES, HEIGHTS AND ELEVATIONS ARE IN METRES  
DISTANCES ARE IN KILOMETRES

CHANGE: ELEV, COORD