


AIRCRAFT PARKING  
CHART - ICAO

MOSCOW, RUSSIA

CARGO AREA SHEREMETYEVO, TERMINAL F

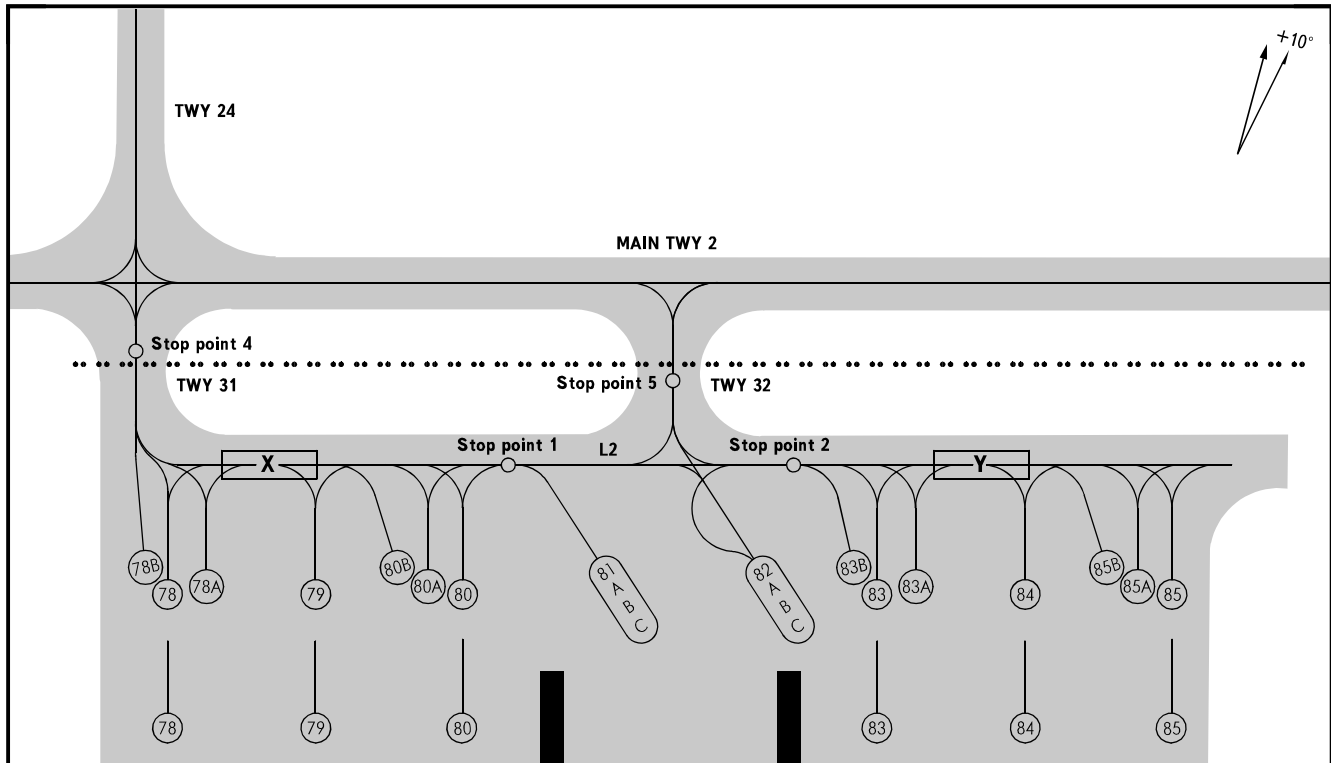

Not to scale

LEGEND

- engines start-up position

**NOTE:**

1. Taxiing to stands 78A, 80A, 83A, 85A, 78, 79, 80, 83, 84, 85 shall be carried out under own engines power via TWY 31, 32 after the "FOLLOW ME" vehicle onto the apron taxi guide line. Stop after the vacation of TWY. Parking onto the stands shall be carried out under the assistance of a tow tractor. Exit from the stands shall be carried out under the assistance of a tow tractor to start-up position "X" or "Y" respectively, then proceed under own engines power via TWY 31 or TWY 32.
2. Taxiing into stands 78, 79, 80, 83, 84, 85 is allowed under own engines power via TWY 31, 32 after the "FOLLOW ME" vehicle. Exit from the stands shall be carried out under the assistance of a tow tractor to start-up position "X" or "Y" respectively, then proceed under own engines power via TWY 31 or TWY 32.

**ACFT types:**

B747-400, MD-11, A-340-600 and smaller ACFT  
B767-200, B767-300, DC-8, A-310, Il-62, Tu-204 and ACFT with smaller wingspan  
B757, Tu-154W and ACFT with smaller wingspan  
B747SP, A-340-200, A-340-300, A-330-200, A-330-300, Il-96M, B767-400, MD-11, MD-11F, Il-76, DC-10

**STANDS:**

81, 82, 78B, 80B, 83B, 85B  
78, 79, 83, 84, 85 facing MAIN TWY  
78, 79, 80, 83, 84, 85 tail towards MAIN TWY  
78, 80A, 83A, 85A, 78B, 80B, 83B, 85B