CHART - ICAO

AIRCRAFT PARKING

AD 2.1 UUWW-45 **RUSSIA AND CIS** 27 JUN 13

> Gulfstream 5. Global-5000 and their modifications; Fokker-70 (100) and their modifications; Falcon-10 (20, 50, 900, 2000), Falcon-7X and their modifications; An-148, An-72, An-74, An-24, An-26, An-28 and its modifications; II-114 and other class 3 and 4 ACFT, 2. Taxiing of Gulfstream 5 and class below ACFT and towing of A-320 and its modifications; A-321 and its modifications; A-318 and its modifications; A-319 and its modifications; B737 and its modifications; MD-82, MD-88, An-12, Tu-134; Yak-42 ACFT are allowed

through stand 11 on apron 2 of VNUKOVO III sector only after the "FOLLOW ME" vehicle when stand 12 is vacant and the route

3. Taxiing of B737-800 and class below ACFT is allowed through stands 52, 63 on apron 4 of VNUKOVO III sector only after the "FOLLOW ME" vehicle when stands 52, 63 are vacant and the route of special transport movement is closed in the vicinity of

of special transport movement is closed in the vicinity of stands 11 and 12.

4. Taxiing of ACFT into/out of stands 32-34 shall be carried out when stand 11 is vacant.

5. Taxiing of ACFT into/out of stands 23-26, 29-31 shall be carried out when stands 18, 27 are vacant.


TOWER

TAXIING 2

MOSCOW, RUSSIA 118.300 DELIVERY 131.125 121.700 VIPPORT 122.875

VNUKOVO

STANDS:

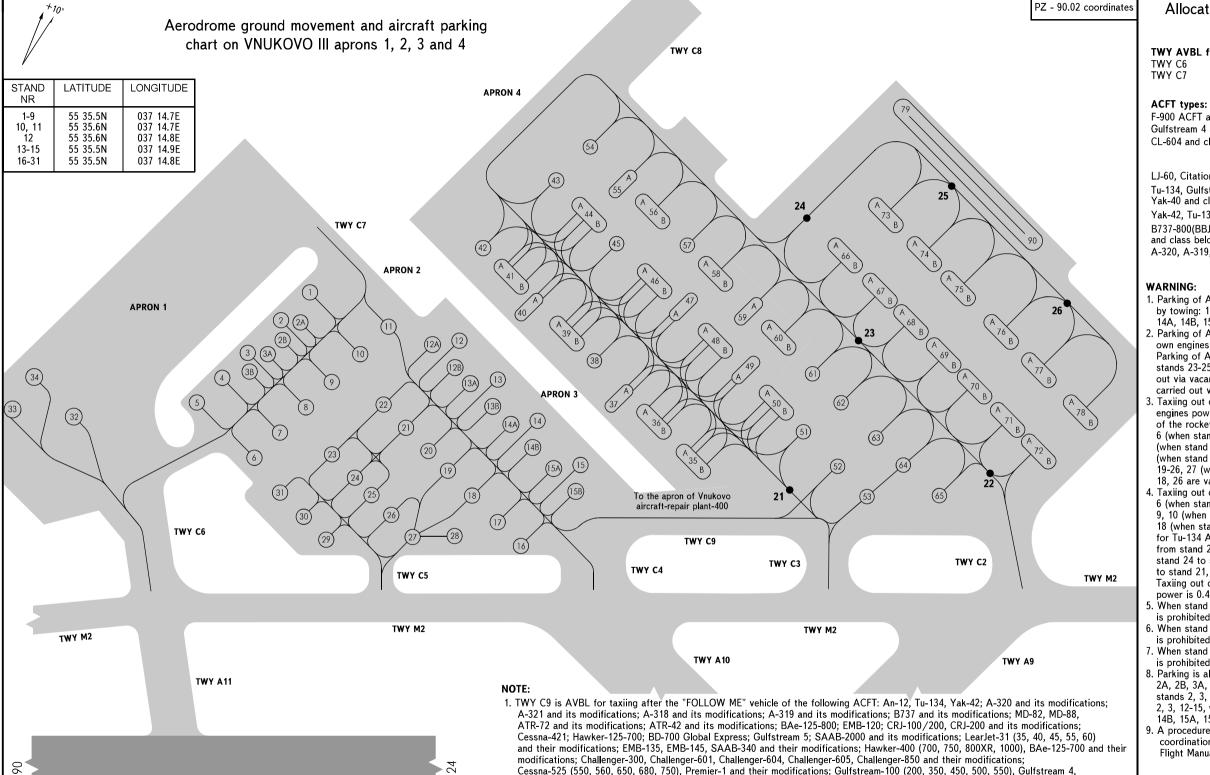

Allocation of ACFT stands on VNUKOVO III aprons 1, 2 and 3

TWY AVBL for ACFT towing and taxiing:

TWY C6 Gulfstream 4, F-900 and class below Tu-134, Gulfstream 5, F-900 and class below

F-900 ACFT and class below 2-5, 21, 22, 28 Gulfstream 4 and class below 6-10, 17, 19, 20 12A, 12B, 13A, 13B, 14A, 14B, 15A, 15B, CL-604 and class below 23-26, 29-31 LJ-60, Citation-650 and class below 1, 2A, 2B, 3A, 3B, 16 Tu-134, Gulfstream 5, GLEX. 11, 18, 27, 34 Yak-40 and class below

Yak-42, Tu-134, Gulfstream 5 and class below 12-15 B737-800(BBJ), B757-200, A-319, F-100, Tu-154 and class below

32 33 A-320, A-319, F-100, Tu-134 and class below

WARNING:

- 1. Parking of ACFT onto the following stands shall be carried out by towing: 1-5, 2A, 2B, 3A, 3B, 6-11, 12-16, 12A, 12B, 13A, 13B, 14A, 14B, 15A, 15B, 17, 28, 33, 34.
- 2. Parking of ACFT onto the following stands shall be carried out under own engines power: 16, 18-26, 27 (when stand 18 is vacant), 29-32. Parking of ACFT onto stands 21-22 shall be carried out via vacant stands 23-25. Parking of ACFT onto stands 23-25 shall be carried out via vacant stands 21-22. Parking of ACFT onto stand 27 shall be carried out via stand 19 only for Gulfstream 4 and class below ACFT.
- 3. Taxiing out of the following stands shall be carried out under own engines power: 1-5, 2A, 2B, 3A, 3B (when rear stands of the apron of the rocket-space corporation "Energy" are vacant respectively), 6 (when stand 31 is vacant), 7, 8 (when stand 23 is vacant), 9, 10 (when stand 22 is vacant), 11-15, 12A, 12B, 15A, 15B, 16, 17 (when stand 28 is vacant), 18 and 28 (when stand 27 is vacant). 19-26, 27 (when stand 18 is vacant, for Tu-134 ACFT - when stands 18, 26 are vacant).
- 4. Taxiing out of the following stands shall be carried out by towing: 6 (when stand 31 is occupied), 7, 8 (when stand 23 is occupied), 9, 10 (when stand 22 is occupied), 17 (when stand 28 is occupied), 18 (when stand 27 is occupied), 27 (when stand 18 is occupied, for Tu-134 ACFT - when stands 18, 26 are occupied), 29-34: from stand 23 to stand 24, from stand 24 to stand 23, from stand 24 to stand 25, from stand 25 to stand 24, from stand 22 to stand 21, from stand 21 to stand 22, from stand 26 to stand 27. Taxijng out of the stand shall be carried out when aircraft engines power is 0.4 of the nominal.
- 5. When stand 32 is occupied, towing of ACFT into/out of hangar 2 is prohibited.
- 6. When stand 33 is occupied, towing of ACFT into/out of hangar 4 is prohibited
- 7. When stand 34 is occupied, towing of ACFT into/out of hangars 2, 3 is prohibited.
- 8. Parking is allowed onto the following stands: 2A, 2B, 3A, 3B, 12A, 12B, 13A, 13B, 14A, 14B, 15A, 15B, when stands 2, 3, 12-15 are vacant respectively; 2, 3, 12-15, when stands 2A, 2B, 3A, 3B, 12A, 12B, 13A, 13B, 14A,
- 14B, 15A, 15B are vacant respectively; 28 when stand 27 is vacant.
- 9. A procedure of engines start-up during towing is allowed by coordination with a controller as in accordance with the Aeroplane Flight Manual of the appropriate ACFT type.

Not to scale

TWY A12